



B-Series Spark Tester Notifications

To download the full instruction manual, see our website:
www.clintoninstrument.com or email: support@clintoninstrument.com

E.C.V.O

Electrode Cover is Open

E.EX.I

External Interlock Not Installed

E.R.V.F

Voltage Removed During Fault

E.COM

**Communication with Test Module
Has been Lost**

E.R.V.C

Voltage Removed by Comm Source

Left Display Codes

Right Display Codes



Default:	Test Voltage	Default:	Any Fault Count
Press A 1x	L.0000	Press B 1x	P.0000
Press A 2x	5.0000	Press B 2x	M.0000
		Press B 3x	M.0000
		Press B 4x	G.0000